


Xbox
One

Arbiter⁴

Pro Paddle

power speed control

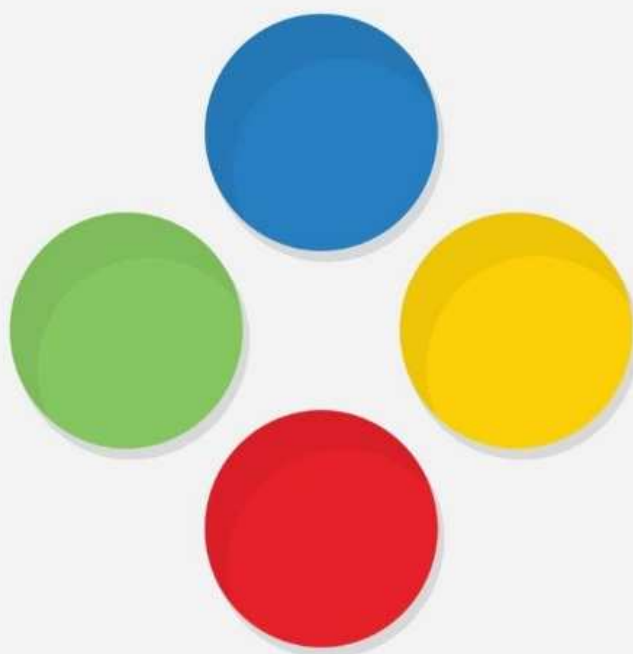


User manual

Congratulations on purchasing the World's Fastest and most versatile Remap Paddle Rapid Fire Controller, Fact! We are sure you will love all the Arbiter 4 Pro Paddle has to offer, and we are always welcome of suggestions on improvements and extra features if you find anything is missing, so don't hesitate to get it touch.

Getting to know your controller

The Arbiter 4 Pro Paddle is turned on and configured primarily with the **Sync** button and **RT** trigger or paddles, with more advanced features described later using other buttons too.

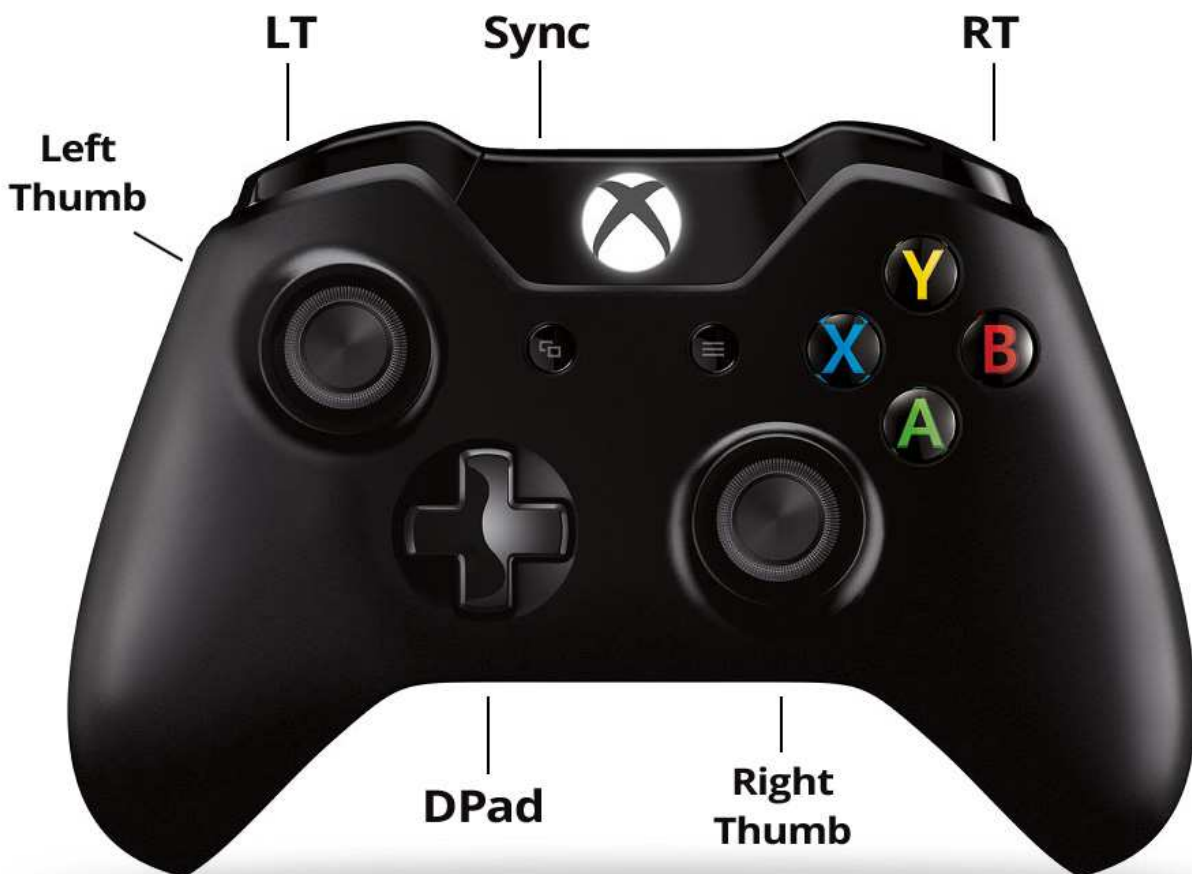

Re-Map Paddles

The Arbiter 4 Paddle Pro has a fully re-map function in addition to the standard Arbiter 4 Chip modes.

Depending on which controller you have purchased it will have come with either 2 or 4 paddles. These paddles can be re-mapped to any of the following Keys, Triggers, Bumpers or Thumb sticks.

ABX or Y, Left or Right trigger, Left or Right Bumper, Left or Right Thumb Click.

You can even have all the paddles mapped to the same function if you want!

To map a paddle it as a simple three step process.

Step 1: Press and hold the paddle you want to remap.

Step 2: Tap the sync once, it should flash twice.

Step 3: Press the Button, Trigger, Bumper or Thumb stick you want to map too and release the button and then the paddle. The paddle is now mapped to that function.

If you want to map more than one paddle to the same function just hold down 2, 3 or 4 paddles at the same time, tap the sync and then the Button/Trigger/Bumper or Thumb stick you want.

Selecting Arbiter Modes

To select a mode, **hold RT** and **tap & release the Sync** button however many times for the mode you want and then **release RT**.

So to select Mode 11 you would **hold RT**, then **tap the Sync button 11 times**, and then **release RT**. The light will flash with each press of Sync, and then when releasing RT will flash back the number of the mode you are now in (in this case 11 times).

The light doesn't flash 11 times for 11, or 77 times for 77 as you would be waiting forever. So what it does is flashes slowly for 10s, and fast for 1s. So 1 slow and 1 fast flash means $(10 + 1) =$ Mode 11. If you entered Mode 64 it would flash 6 slow and 4 fast.

Quick Enable / Disable

If at any point you want to quickly disable the chip, simply **tap Sync** button without any other buttons pressed. The light will flash rapidly several times then go off. The chip is now disabled.

If you were previously in a mode and want to quickly get everything back on, tap Sync again and it will re-enter where you left off.

Chip Modes

One feature that makes the Arbiter 4 Controllers so powerful is the ability to totally change its list of modes, effectively making the chip like a whole new product. For example some chips on the market have modes specifically for Call of Duty, others a general all-rounder's, but no other chip has the ability to be all of those in one. This is what the A4 'Chip Select' is. You can change the A4 into a Specific List of modes that best suit you!

Master Reset

As the Arbiter 4 has many Features that can be turned on and off and rapid fire speeds and other timings that can be adjusted by the user sometimes you just want to factory restore the chip to the beginning in case you forget that is active and what is altered.

To master reset the chip, turn on the controller, **hold down X** button, **tap and release Sync** but **keep X held** for 6 seconds. After 6 seconds the light will fade in then fade out (pulse). Your chip is now reset.

LiTE Modes (Y)

1. Ultra Fire
2. Rapid Fire
3. Rapid Fire (**3 Burst**)
4. Ultra Fire + Drop Shot (**LTC***)
5. Drop Shot + Aim (**LTC***)
6. Rapid Fire + Drop Shot + Aim (**LTC***)
7. Ultra Fire + Jump Shot (**LTC***)
8. Jump Shot + Aim (**LTC***)
9. Rapid Fire + Jump Shot + Aim (**LTC***)
10. **User Programming Mode**
11. Rapid Fire + Auto-Fast Reload + Aim
12. Dual Trigger
13. Quick Scope (3 Burst)
14. Combi Mode (**LT: Rapid Fire, RT: Aim**)

Arbiter 2 Modes (A)

1. Ultra Fire
2. Auto Aim
3. Rapid Fire + Auto Aim
4. Rapid Fire
5. Combi (**LT: Rapid Fire, RT: Auto Aim**)
6. Rapid Fire + Auto Aim (**5 Shot Burst**)
7. Rapid Fire (**5 Shot Burst**)
8. Rapid Fire + Aim
9. Dual Trigger
10. **User Programming Mode**

Gears of War Modes (B)

1. Lancer & Scorcher + Fast Reload
2. Retro Lancer + Fast Reload
3. Gnasher + Fast Reload
4. Snub & Boltok + Fast Reload
5. Hammerburst + Fast Reload
6. Sawn Off + Fast Reload
7. Boomshot + Fast Reload
8. Longshot + Fast Reload
9. Torque Bow + Fast Reload
10. **User Programming Mode**

User List (Customizable)

1. **A** Rapid Fire + Aim
2. **B** Drop Shot (**LTC***)
3. **X** Rapid Fire + Drop Shot (**LTC***)
4. **Y** Quick Scope Tap Shot
5. **RB** Dual Trigger

* *LT Cancellation*

Customizing User List

The User List comes with 5 modes pre-set. To enter a User List mode is very fast and easy – sort of like a “Quick List”.

To enter a User List Mode, hold the button for that mode and tap Sync. So for Mode A you would **hold A** and **tap Sync**, **keep A held for 1 second** then release. Quick, yeah?

It gets better! As there are so many modes to choose from, you may want to have a handful of your favourite modes at quick disposal. You can put any mode into the User List slots with ease so that you can add your 5 best modes and quickly switch between them with a single button press.

To set a mode to the User List slot enter the mode you want as you would normally do, then whilst in that mode, hold the User Button (the A, B, X, Y or RB) and tap sync twice. The light will flash 1 to 5 times to indicate it is set. Release it before 5 seconds though!

Elite Modes

RAPID FIRES (RT)

1. Rapid Fire
2. Rapid Fire (GOW)
3. Rapid Fire GTA + Aim
4. Ultra Fire
5. Dual Trigger
6. Aim
7. Rapid Fire + Aim
8. Rapid Fire 3 Burst
9. Ultra Fire + Drop Shot + Aim (LT Cancellation)
10. [User Programming Mode](#)

DROP SHOTS (RT + B)

11. Drop Shot
12. Rapid Fire + Drop Shot
13. Ultra Fire + Drop Shot
14. Drop Shot (LT Cancellation)
15. Rapid Fire + Drop Shot (LT Cancellation)
16. Ultra Fire + Drop Shot (LT Cancellation)
17. Drop Shot + Fast Reload
18. Drop Shot + Auto-Fast Reload
19. Rapid Fire + Drop Shot + Fast Reload
20. Rapid Fire + Drop Shot + Auto-Fast Reload

DROP SHOTS + AIM (RT + B + LT)

21. Drop Shot + Aim
22. Rapid Fire + Drop Shot + Aim
23. Drop Shot + Aim (LT Cancellation)
24. Rapid Fire + Drop Shot + Aim (LT Cancellation)
25. Drop Shot + Fast Reload + Aim
26. Drop Shot + Auto-Fast Reload + Aim
27. Rapid Fire + Drop Shot + Fast Reload + Aim
28. Rapid Fire + Drop Shot + Auto-Fast Reload + Aim
29. Drop Shot + Auto Aim
30. Rapid Fire + Drop Shot + Auto Aim

JUMP SHOTS (RT + A)

31. Jump Shot
32. Rapid Fire + Jump Shot
33. Ultra Fire + Jump Shot
34. Jump Shot (LT Cancellation)
35. Rapid Fire + Jump Shot (LT Cancellation)
36. Ultra Fire + Jump Shot (LT Cancellation)
37. Jump Shot + Fast Reload
38. Jump Shot + Auto-Fast Reload
39. Rapid Fire + Jump Shot + Fast Reload
40. Rapid Fire + Jump Shot + Auto-Fast Reload

JUMP SHOTS + AIM (RT + A + LT)

41. Jump Shot + Aim
42. Rapid Fire + Jump Shot + Aim
43. Jump Shot + Aim (LT Cancellation)
44. Rapid Fire + Jump Shot + Aim (LT Cancellation)
45. Jump Shot + Fast Reload + Aim
46. Jump Shot + Auto-Fast Reload + Aim
47. Rapid Fire + Jump Shot + Fast Reload + Aim
48. Rapid Fire + Jump Shot + Auto-Fast Reload + Aim
49. Jump Shot + Auto Aim
50. Rapid Fire + Jump Shot + Auto Aim

AUTO AIMS (RT + LT)

51. Combination Mode (LT = Rapid Fire, RT = Aim)
52. Auto Aim
53. Auto Aim on LT
54. Fast Reload + Auto Aim
55. Auto-Fast Reload + Auto Aim
56. Rapid Fire + Auto Aim
57. Ultra Fire + Auto Aim
58. Rapid Fire + Fast Reload + Auto Aim
59. Rapid Fire + Auto-Fast Reload + Auto Aim
60. Ultra Fire + Auto-Fast Reload + Auto Aim

FAST RELOADS (RT + X)

61. Fast Reload
62. Auto-Fast Reload
63. Rapid Fire + Fast Reload
64. Rapid Fire + Auto-Fast Reload
65. Fast Reload + Aim
66. Auto-Fast Reload + Aim
67. Rapid Fire + Fast Reload + Aim
68. Rapid Fire + Auto-Fast Reload + Aim
69. Rapid Fire GOW + Fast Reload GOW
70. Rapid Fire GOW + Auto-Fast Reload GOW

SPECIALS (RT + LT + X)

71. 2SPS DMR (HALO)
72. Ultra Fire Alternative
73. Combi Legacy (LT = Rapid Fire, RT = Auto Aim)
74. Quick Scope
75. Quick Scope (3 Burst)
76. Quick Scope + Rapid Fire
77. Quick Scope Tap Shot (Hold Cancel*)
78. Quick Scope Tap Shot

* **Hold Cancel:** This means if you hold LT for longer than it would be before it tap shots (default 1/3rd of a second) then it won't fire. This allows you to use Tap Shot mode and still aim without firing if needed.

Chip Modes: Selecting the list of modes

This step is optional and only needs to be done each time you want to change the list of modes. As standard the chip comes in LiTE mode. If at this stage you want to swap your list of modes (Lite, Elite, A2 etc...) then do the following. Changing modes takes 5-10 seconds.

To select **Elite** or **Lite** mode, hold **Y**, tap & release **Sync** and **keep Y held** until light flashes.

To select **Arbiter 2** mode, hold **A**, tap & release **Sync** and **keep A held** until light flashes.

To select **GOW 3** mode, hold **B**, tap & release **Sync** and **keep B held** until light flashes.

1 flash is **Elite**, **2** flashes is **Arbiter 2**, **3** flashes is **GOW3**, **4** flashes is **LiTE**.

Once you are in that chip select, that is it, you are good to go and don't have to change it until you want to change chips, even after the battery is removed. So select your desired chip once, and then start using it. We recommend basic LiTE mode to begin with, which is what all controllers are setup to be as default.

Quick Select

In Elite mode only, because there are 70+ modes you don't want to be pressing sync 70 times, instead of just holding RT, each mode section has "activator buttons" so you can get there quicker.

For example a Drop Shot + Aim section has (RT+LT+B) in the title then 10 modes in that section.

To get to Mode 6 within that (Mode 26), instead of holding RT, you **hold RT, LT and B** then **tap Sync 6 times**. Wait 1 second then release all buttons. If you release them too quick the controller will disconnect so make sure you just wait a second.

When you release the light will flash 2 slow and 6 fast to indicate mode 26.

Tactical Remapping Layout

Some users like to use alternate button layouts for the games. For Call of Duty the popular alternative is Tactical Layout, which swaps the Drop button and Knifing button (B and Right Thumb) around, so B will knife and the right thumb will drop. For Battlefield style games the dropping is by default the right thumb stick.

Obviously this causes problems with the Drop Shot feature.

When you use Drop Shots with remapping turned on, it will use the right thumb stick for any B actions.

To turn feature on/off **hold down Right Thumbstick** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Battlefield Auto-Spot

A much desired feature for you Battlefield fans is Auto-Spot. In a multiplayer game or Campaign, you can 'spot' enemies by looking at them and **pressing Back** button. This can be very difficult to do during gameplay as the Back button is in a difficult spot.

What Auto-spot does is as soon as you **press LT** to look down your weapon, or even when you shoot with **RT** the chip will start spotting for you (**pressing Back**) thereby instantly spotting any enemy you every shoot or look at!

As some of you may know, pressing Back too often results in you getting blocked for a few seconds from spotting. Don't worry – the A4 chip bypasses all of that and you never get a block.

To turn feature on/off **hold down Left Thumbstick, Right Thumbstick and RT** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Auto-Stand

In Drop-Shot modes, after dropping you to the floor and releasing RT the chip automatically stands you back up. If you would prefer it to leave you down after releasing RT then you can toggle the feature on/off.

To turn feature on/off **hold down Left Thumbstick and B**, then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Crouch Shot

In Drop-Shot modes by default you drop right to the floor. If you would prefer to just duck or crouch which gives you better movement, quicker recovery and quicker aiming, then you can swap all Drop Shot modes to use Crouch Shot.

To turn feature on/off **hold down Left Thumbstick, A and B**, then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Auto-Run

One of the little hidden extras of the A4 is a new feature called Auto-Run. How annoying is it that you have to click in the left thumb stick all the time to run in games like Call of Duty? Not only that but it increases the wear on your controller. Not any more, not with Auto Run!

With Auto-run turned on all you need to start running is **press and release LT**. Now when you push up on the left thumb stick you will instantly run continually. To de-activate a run just press any other button such as A, B, X, Y, RT, RB etc... To activate it again just pull LT.

To turn feature on/off **hold down Left Thumbstick** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off

Quick Knife

For COD games you can enable Quick Knife. You need to have a Semtex grenade available. Knife and you will knife and recover faster so you can shoot/knife again almost immediately after.

To turn feature on/off **hold down Left Thumbstick, B and Y** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Gears of War: Auto-Chainsaw

For Gears of War, there is a new feature called Auto-Chainsaw. When you use a weapon with a chainsaw you can kill enemies by holding B to bring up the chainsaw. When you face an enemy who also has a chainsaw you have to rapidly press B as soon as the dual starts.

With Auto-Chainsaw enabled you simply have to **hold the Left Thumbstick while B is pressed**, then as soon as you enter the dual, **release B** but **keep Left Thumbstick pressed** and the chip will rapidly press B.

To turn feature on/off **hold down Left Thumbstick and Right Thumbstick** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Gears of War: Auto-Revive

For Gears of War, there is a new feature called Auto-Revive. When you get downed by an enemy, you must rapidly press A to revive.

With Auto-Revive enabled you simply have to **hold the Left Thumbstick** and **tap A**, and while you **keep Left Thumbstick pressed** the chip will rapidly press A.

To turn feature on/off **hold down Left Thumbstick and A** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Gears of War: Auto-Mark

For Gears of War, there is a new feature called Auto-Mark. When you aim at an enemy by holding LT you can press in the Left Thumbstick to mark them with a coloured tag that will follow them even behind objects and smoke so you can easily spot them and shoot them. Aiming, firing, and pressing the Left Thumbstick all the time can become hard work.

With Auto-Mark enabled you simply have to aim by **holding LT** and while you **keep LT pressed** the chip will rapidly press the Left Thumbstick.

To turn feature on/off **hold down Left Thumbstick and LT** and then **tap Sync**.

When you do this the light will flash twice to say it is turned on, or once to say it is turned off. Each time you tap Sync it toggles on/off.

Adjusting Speed

One of the best things about the Arbiter 4 is every single mode that uses Rapid Fire or timings can have its speed completely customized for future proof games.

As default the speed of rapid fire is what we call **Speed Mode 5**. The slowest speed is Speed Mode 60 (1 shot every 2 seconds) and fastest is **Speed Mode 1** which is over **125 shots per second!** (the speed at which the Xbox One console updates the triggers so it cannot go any faster).

To adjust the speed of all modes on the chip, go into the User Programming Mode (by going into the **User Programming** mode which is Mode 10) and you will notice the light will stay off when you release RT instead of flashing back the mode number to you. You are now ready to adjust the speed. You will start in whatever speed you were currently in, so if you haven't done this before it will be Speed Mode 5.

To increase the speed, **press and release LT**. The light will also flash once to indicate an increase. You will now go to the next Speed Mode up (if you were in 5 to start with it will be 4, lower is faster on the Arbiter 4, as oppose to slower like the Arbiter 3.5).

You can test this speed on the fly by **holding RT**. To continue increasing the speed just **press LT** again until you get to where you want. If you go too far, or want to slow down the speed (i.e. go backwards one in the Speed Mode) then **hold A** while you **press LT** and instead of speeding up 1 it will slow down 1.

Once you are happy with your speed **tap the Sync button** with **no other buttons pressed**, and the light will flash back to you the Speed Mode you are in. So for Speed Mode 37 it would flash 3 times slowly and then 7 times fast.

This speed is then hard saved into the chip and will be remembered even when the battery is removed – you can now select any mode that uses Rapid Fire and see the speed has totally changed.

NOTE: *If you lose track of the speed, you can easily reset the chip to Speed Mode 5 by going into User Programming Mode and then holding the B button for 3 seconds. The light will flash a few times to confirm.*

HINTS: Try Speed Mode 3 for Modern Warfare 3 on Snipers and Pistols!

: Try Speed Mode 7 for COD Advanced Warfare Snipers and Pistols!

Tap Shot Timing Adjust

As well as the rapid fire speed, the timing of the Quick Scope Tap Shot can be fully adjusted.

To enter the user programmable mode for adjusting tap shot timings, you enter Tap Shot mode as you normally would except instead of holding RT + LT + X, you **hold RT, LT, X and RB** then **tap Sync** 7 times. Remember to keep the buttons held for another second and then release them. Now the light will stay on instead of flashing back number 77.

You are now ready to tweak the timings. To adjust the timing you can increase/decrease the speed (delay) between pressing LT and the gun firing.

To reduce the delay (shoots sooner) **press and release Left Thumbstick**. Each time you press the Left Thumbstick the light will flash. You can test the new speed by **tapping LT** and it will fire the gun briefly after that. The default time is 1/3rd of a second after LT being pressed.

To slow down the speed (increase the delay) **hold A** when **pressing Left Thumbstick**.

Once you are happy with the timing set it by tapping Sync button with no buttons pressed.

GOW Fast Reload Timing Adjust

As well as the rapid fire speed, the timing of the Fast Reload for Gears of War games can also be adjusted to keep up with any adjustments in the timing for future patches.

Firstly make sure you are in the GOW3 chip mode so you can access the modes. Now to adjust the fast reload timings, enter any GOW mode as normal (hold RT then press Sync so many times) but instead of entering the mode with just RT held, enter it with RB held as well. So to adjust the timing of the Retro Lancer for example you would **hold RT and RB** and **press Sync** 2 times, keep the buttons held for a second and release them.

You are now ready to tweak the timings. To adjust the timing you can increase the speed (so reduce the delay) between reload by **pressing and releasing LT**. Each time you press LT the light will flash. You can test the new speed by **tapping RB**. To slow down the speed (increase the delay) **hold A** when **pressing LT**.

Once you are happy with the timing set it by tapping Sync button with no buttons pressed.

Features Explained

As many users might not be familiar with common terms used in the modified controller industry, and as many have been created by the AnglesixTeam and only exist in the A4 chip, find below explanations of what each terminology means.

Rapid Fire

Rapid fire is when you press the RT trigger to fire your weapon and the chip rapidly fires the trigger simulating you pressing the RT trigger over and over very fast.

Ultra Fire

Ultra fire is an enhancement of Rapid Fire to make semi and fully automatic guns fire even faster. This mode is only available for Call of Duty games up to Black Ops. *Any CODs that don't support it will just cause the gun to swap weapons very fast.*

Dual Trigger

Also sometimes called Akimbo, Dual Trigger is Rapid Fire but for dual wielding guns like Dual Pistols in Call of Duty and dual wielding in Halo's etc... Just pull the fire trigger to rapid fire both triggers. If you have a single weapon in this mode you can hold LT (to aim) before pulling RT to fire and it will rapid fire the single shot weapon ok too.

Burst Fire

Burst fire is just Rapid Fire but with a limited number of bullets. So 3 Burst will rapidly fire 3 shots then stop until you release the trigger. Perfect for snipers and ammo preservation.

Quick Scope & Tap Shot

With quick scope, as soon as you look down the sight by holding LT, the chip will automatically hold your breath for you to steady your aim, which you would usually have to click in the left thumb stick to do. This makes scoping much easier. In Tap mode you just tap LT quickly and let go and the chip will keep LT pressed then fire shortly after.

LT Cancellation

For Jump and Drop Shot modes, you don't always want to drop or jump, for example if you are behind a window. To prevent the drop or jump, in any mode with LT Cancellation, if you are already pressing LT (looking down the sight) when you fire you won't drop or jump.

Aim & Auto Aim

Any modes that have 'Aim' activated mean that by pulling RT to fire, it will automatically pull LT for you so you don't have to manually aim down the sight. One less thing to think about.

Auto aim is similar, but for offline games that have an 'aim assist' option, the Auto Aim will automatically track the enemies for you so you don't even need to aim at them!

Drop Shot

Still the only chip on the market to do Drop Shot fully and not do half a job. When you pull the RT the chip will instantly and automatically drop you to the floor while doing any other action on the mode you are in (such as aim for you and rapid fire), then as soon as you release RT it will stand you back up!

Jump Shot

This is identical to drop shot but instead of dropping to the floor, you will continually jump.

Fast Reload

Fast Reload and Auto Fast Reload work specifically on Black Ops and Gears of War 2 & 3. For Fast Reload, when you reload your weapon, the A4 will automatically 'glitch' on Black Ops about half a second before finishing allowing you to finish reloading that little bit quicker. This works for FN Fal, Famas and a few others.

For Gears of Wars games the Fast Reload is perfectly timed Active Reloads when you press reload.

Auto-Fast Reload is the same as Fast Reload but you don't have to press reload, you just let go of RT after firing, and it will reload for you.

What is...?

As we wanted to keep the manual nice and compact and not over complicate things, information on things like “What is drop shot?” or “What is LT Cancellation” and so on, we describe all the features and definitions over at www.headshotcontrollers.co.uk so just pop over there for detailed descriptions of what all things like drop shot, jump shot and auto aim all refer too.

Any questions feel free to drop us an email at sales@headshotcontrollers.co.uk but please do try to find out the answer to your questions at headshotcontrollers.co.uk first as we have everything covered there.

For more information visit www.headshotcontrollers.co.uk